


### Removal

---

- 1 Remove instrument cluster (54–250).
- 2 Remove tachometer (54–253)
- 3 Unscrew fastening screw (3).
- 4 Pull out potentiometer.
- 5 Completely remove indicating instrument.

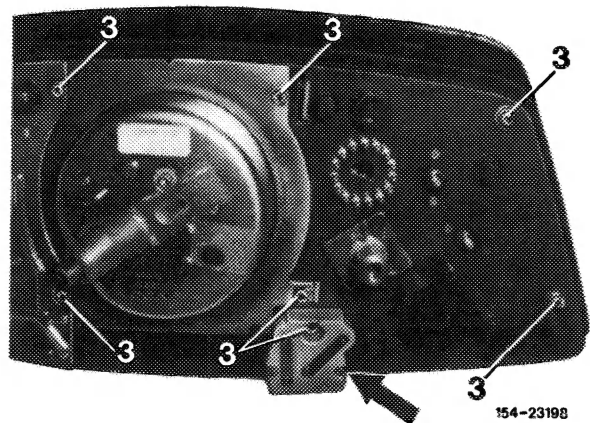

### Installation

---

- 6 For installation proceed vice versa.

**Note:** When installing potentiometer, make sure that the shaft enters sleeve (arrow).

